

PBXact Appliance

SETUP GUIDE

Thank you for your purchase of your new genuine PBXact Appliance from Sangoma.



1. Determine the IP address of the PBX by plugging in a monitor and keyboard. If your appliance connects using an RJ45 console port, please visit this page: <http://wiki.freepbx.org/display/FA/Appliance+USB+to+Serial+Cable>. All PBXact appliances come with DHCP enabled on the server so it will grab an IP address for you. The default root password is set to "sangoma". Type "ifconfig" from the command to determine what the current IP address of your PBX is.


```
[root@static ~]# ifconfig
eth0      Link encap:Ethernet  HWaddr EE:BA:AC:63:F0:84
          inet addr:192.168.1.1  Bcast:66.185.28.127  Mask:255.255.255.224
          inet6 addr: fe80::ecba:acffLfe63:f084/64  Scope:Link
          UP BROADCAST RUNNING MULTICAST  MTU:1500  Metric:1
          RX packets:122132 errors:0 dropped:0 overruns:0 frame:0
          TX packets:8202 errors:0 dropped:0 overruns:0 carrier:0
          collisions:0 txqueuelen:1000
          RX bytes:18643790 (17.7 MiB)  TX bytes:1649490 (1.5 MiB)
          Interrupt:10 Base address:0xa000
```

2. Change the root password to something more secure. You can do this from the Linux CLI by typing "passwd" and then it will prompt you to type your new password twice.

```
[root@static ~]# passwd
Changing password for user root.
New password: █
```

3. Now that you know your IP address you can log into the PBXact GUI and create an admin password. To do this type the IP address of your PBXact system and the port number of 2001 into a web browser on the same network as your PBXact system (e.g. <http://192.168.1.1:2001> replacing 192.168.1.1 with your IP address).

It should now prompt you to create a user name and password as shown in the screen below.

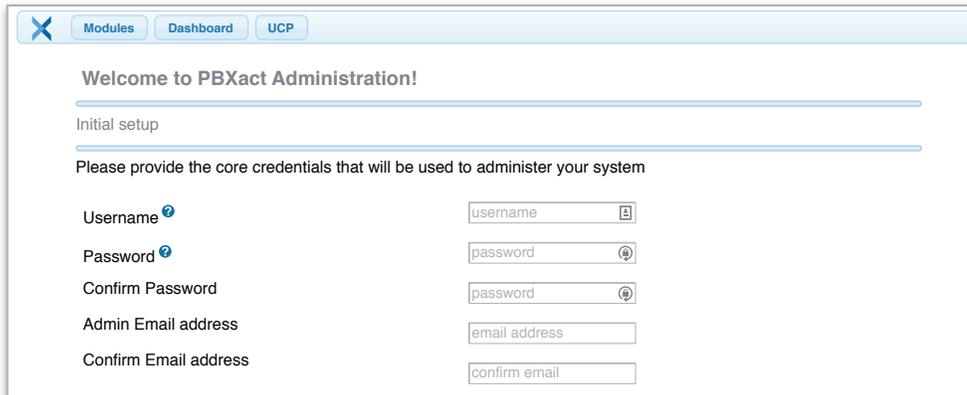


The screenshot shows the 'Initial setup' page in the PBXact Administration interface. The page title is 'Welcome to PBXact Administration!'. Below the title, there is a section for 'Initial setup' with the instruction: 'Please provide the core credentials that will be used to administer your system'. The form contains the following fields:

- Username:
- Password:
- Confirm Password:
- Admin Email address:
- Confirm Email address:

If you're prompted with a login screen, you will need to log in using "admin" as the user name and "sangoma" as the password.

4. To change the network to a static IP address click on the System Admin module from the menu bar, then click on network and change your networking settings.

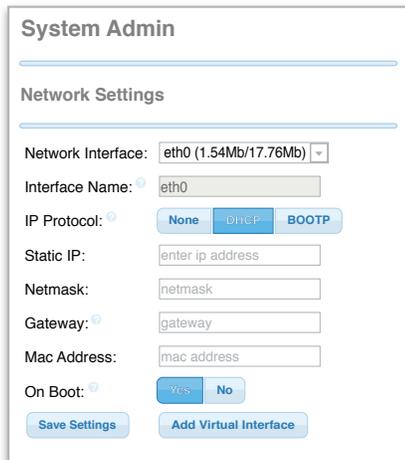

The screenshot shows the 'System Admin' page with the 'Network Settings' section. The settings are as follows:

- Network Interface: eth0 (1.54Mb/17.76Mb)
- Interface Name: eth0
- IP Protocol: None DHCP BOOTP
- Static IP:
- Netmask:
- Gateway:
- Mac Address:
- On Boot: Yes No

Buttons at the bottom: Save Settings, Add Virtual Interface

Thank you for your purchase of PBXact UC.

Discover products & solutions designed for PBXact today!

Visit sangoma.com/PBXact ➔